

vernee



Wireless Microphone **M1**
USER MANUAL

PRODUCT INTRODUCTION

Dear user, thank you for choosing to use our wireless microphone. This instruction manual will provide you with a clear user guide to help you quickly get started and make full use of the product's features.

 
This product consists of three parts: microphone, receiver, and charging case. It can provide professional-level recording and live streaming output, plug and play, without the need for an APP, and can be used in scenarios such as online live streaming, video VLOG shooting, program interviews, interview recordings, and video teaching.



Charging Case




Microphone



Receiver


APPLICATION METHOD

1. Take out the microphone and the receiver
(products without a charging case need to be turned on).

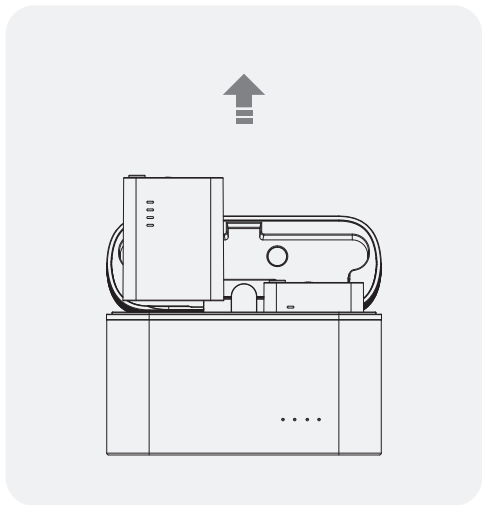


APPLICATION METHOD

2. Insert the receiver into the phone (the microphone and the receiver indicator lights will be on for long-term use)

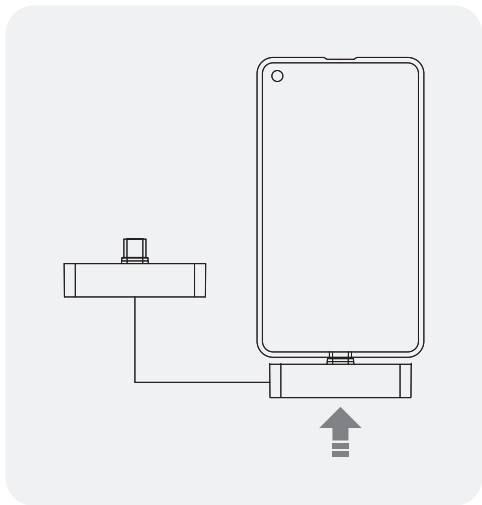

MICROPHONE - BUTTON

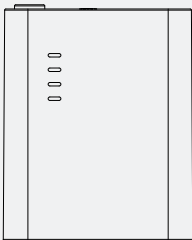


On/Off - Hold the
Multifunction Button for 3s

Noise Reduction
- Press Once


 



Reverb
- Double Press

Mute
- Triple Press

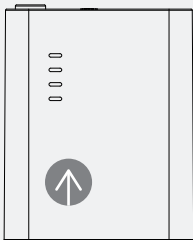
MICROPHONE - INDICATOR LIGHTS



Indicator Lights:

-  Blue light flashing slowly - Pairing
-  Blue light on - Paired
-  Orange light on - Noise reduction on
-  Green light on - Reverb on
-  Red light on - Mute on

RECEIVER - INDICATOR LIGHTS

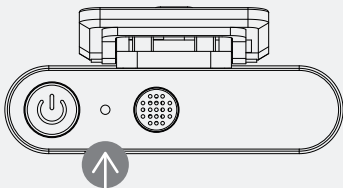

Red light on - Charging

Green light on - Fully charged

Red light flashing - Low battery

RECEIVER - INDICATOR LIGHTS




Pairing indicator light

Blue light on - Paired


Blue light flashing slowly - Pairing

CHARGING CASE

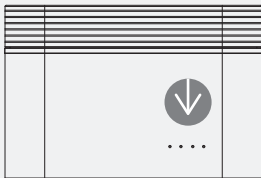

Power display


- 25%
- • 50%
- • • 75%
- • • • 100%

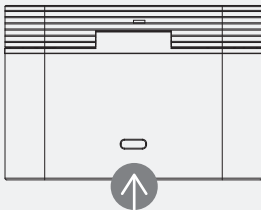

Charging port

MOBILE PHONE CHARGING

During shooting short videos or live streaming,you can charge the phone through the interface of the receiver.

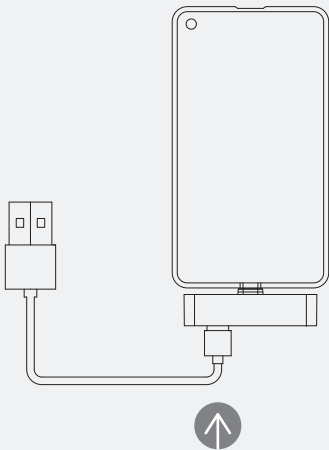

FAQ

1. Why can't I record normally after connecting to the phone?

*Please check whether the connection indicator lights of the microphone and receiver are always on.

*Please check whether the microphone has sufficient power. If the battery is low, please charge it in time.

*Some Xiaomi and Huawei phones need to update the phone version (Settings > My Device > Version > Check for Updates).

*Some brand phones such as VIVO, OPPO, Realme, Oneplus, igoo, etc. need to turn on the "OTG" function and open the external recording device

Step 1: Open the "OTG" process: Phone Settings > Other Settings > OTG > Open (or search for "OTG" in the settings search box and open it)

Step 2: Open the external device process: Settings > Sound and Vibration > More Sound Settings > Default Recording Device > External Device

2. The microphone cannot record for the camera App that comes with the device?

*Some brand phone systems have strict restrictions that prevent the microphone from obtaining audio permissions, not because of the quality of the microphone. If this happens, please contact the brand phone manufacturer.

*This product is compatible with the vast majority of Apps on the market. Please try to use other Apps instead.

FAQ

3. The recorded sound has noise?

*Check whether the microphone has turned on the noise reduction mode (the second indicator light is always on to turn on). Click the multifunction key to turn on the noise reduction.

4. The recorded sound is too low?

*Please reasonably shorten the distance between the microphone and the sound source to avoid distortion.

*Please click the microphone volume key on the receiver to increase the volume.

*Some brand phones such as VIVO, OPPO, Realme, Oneplus, iqoo, etc. need to turn on the "OTG" function and open the external recording device (please follow the operation in the first point of common problems).

5. What should I do if there is wind noise?

*If you have purchased a model with a windscreen, please install the windscreen on the microphone.

6. What should I do if the connected phone has low battery during recording?

*Please connect the charging cable to the charging port of the receiver to charge the phone.

7. What should I do if there is an echo?

*Check whether the microphone has turned on the reverb function (the third indicator light is on to turn on). Double-click the multifunction key to turn off the reverb.

FAQ

*In the live broadcast room, enter the song selection interface and set it to the original sound in the tuning.

8. What should I do if there is an echo in the live broadcast?

*Please turn off the sound of the phone watching the live broadcast room, otherwise there will be an echo (the phone watching the live broadcast room in the same space cannot have sound).

PRODUCT PARAMETERS

Wireless transmission	2.4GHz
Sound delay	<20ms
Frequency response	20Hz-20KHz
Sensitivity	-35dB
Signal-to-noise ratio	70dB
Transmission distance	164ft/50m
Microphone	360-degree omnidirectional
Battery life	Microphone:17h With charging case: 68h
Charging Time	1.5h
Battery capacity	Microphone:200mAh Charging case:500mAh
Input voltage	DC4.5-5.2V
Adapter	5V/1A
Weight:	Microphone:13 g Receiver:4 g Charging case:93 g
Size	Microphone:1.57×1.29×0.56in Receiver:2.07×0.85×0.33in Charging case:3.50×2.38×1.22in

SAFETY PRECAUTIONS

1. The product contains strong magnets. To avoid magnetization, please keep it away from easily disturbed devices such as magnetic cards, IC cards, implantable medical devices (such as pacemakers), hard disks, and RAM chips.
2. It is strictly forbidden to let the product come into contact with any liquid. Do not immerse the product in water or get it wet. Do not use the product in the rain or in a humid environment. After the product comes into contact with water, it may cause a corrosion reaction, which may cause the battery to spontaneously ignite or even explode.
3. If the product catches fire, please immediately use water, water mist, sand, fire blanket powder, carbon dioxide fire extinguishers to extinguish the fire. Please choose the fire extinguishing method according to the above recommended order according to the actual situation.
4. Please use the product in an environment between $-10^{\circ}\text{C}/14^{\circ}\text{F}$ and $45^{\circ}\text{C}/113^{\circ}\text{F}$, with a charging environment temperature of $5^{\circ}\text{C}/41^{\circ}\text{F}$ to $45^{\circ}\text{C}/113^{\circ}\text{F}$.
5. It is forbidden to disassemble the product in any way. If the battery is punctured during the disassembly process, it will cause the battery internal electrolyte to leak, and even cause a fire or explosion.
6. It is forbidden to mechanically impact, crush or throw the product. Do not place heavy objects on the product.

SAFETY PRECAUTIONS&QUALIFIED

7. Do not place the product near heating equipment, cooking equipment, high-pressure containers, etc. (such as microwave ovens, battery stoves, electric ovens, electric heaters, pressure cookers, water heaters, gas stoves, etc.) or inside to prevent the battery from overheating and exploding.
8. It is prohibited to place products near heat sources (such as stoves or heaters) or in cars on hot days. Do not store the product in an environment exceeding 60°C/140°F.
9. Do not store the battery for a long time after it is completely discharged to avoid the battery entering an over-discharged state and causing damage to the battery cell, which will not be restored.
10. You must use the original matching model of the charging case, data cable, and battery.
11. Using an uncertified charging case data cable or battery by the manufacturer, or a non-matching model, may cause electric shock, fire, explosion or other hazards.

PACKING LIST

- | | |
|-------------------------|----|
| 1. Wireless Microphone | ×2 |
| 2. TYPE-C receiver | ×1 |
| 3. Lightning receiver | ×1 |
| 4. Charging compartment | ×1 |
| 5. Charging cable | ×1 |
| 6. Plush Windproof Cap | ×2 |
| 7. Carrying Case | ×1 |
| 8. Quick Start Guide | ×1 |



